

Nuage

Installation Guide



Main Material of Manufacture - Steel

Attention The connection of this radiator to a central heating system should be carried out by a suitably competent person who is familiar with current regulations.

Read this guide before starting installation

Handling Advice

Please refer to the manual handling guidelines that are supplied with this product. This gives important information about the safe lifting of these radiators to minimise risk and damage.

Water Treatment

These products are for use on closed heating systems only; they are not suitable for installation on secondary HWS circuits.

On completion of the installation the entire system MUST be thoroughly cleaned and flushed to remove debris/flux residues etc. If a chemical cleanser is used, it must be thoroughly flushed from the system. Following this, the system MUST be dosed with a good quality water treatment to prevent corrosion. System design, flushing and dosing must be in accordance with BS 5449: 1990, BS EN 12828: 2003 and BS 7593: 1992

IMPORTANT: Failure to observe these requirements will render the guarantee on the product void.

Corrosion inhibitor must be used in accordance with the manufacturer's instructions and recommendations and should take into account the particular metals within the system.

Cleaning & Aftercare

For products with a stainless steel finish or polish, clean using surgical cotton soaked in alcohol.

Operating Pressure

Maximum 6 bar

Further Information

These radiators have been designed, manufactured and tested to ensure a long-lasting use. Should you require any further information, help or advice, or have any difficulties with these products or their installation and use, please contact our office on:


Tel: **01268 546700** Fax: **01268 888250**

Web: **www.mhsradiators.com**

write to: 3 Juniper West, Fenton Way, Southfields Business Park, Basildon, Essex SS15 6SJ



Installation Instructions

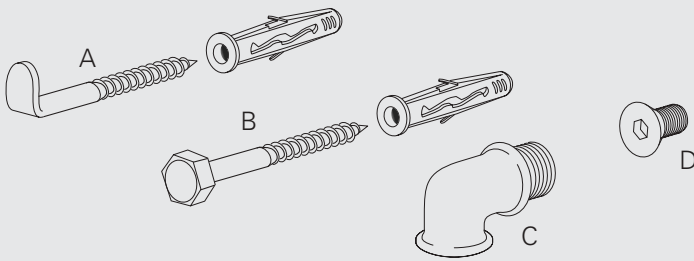

Assembly kit:

- A)** 4 screws with pressure plugs
- B)** 4 brackets
- C)** Optional: valve, holder "cilindro"
- D)** Optional: valve, holder "cilindro"

To Fit onto the wall:

- 1:** After having calculated the exact position and having made 2 holes ($\varnothing 10\text{mm}$) on the upper part of the wall, insert the 2 hooks (A) on the wall.
- 2:** Hang the heating element up.
- 3:** After having calculated the exact position and made the 2 holes ($\varnothing 10\text{mm}$) on the lower part of the wall, insert the 2 hexagonal screws (B) thereby securing the heating element.
- 4:** Connect the radiator to the system using the valve and the holder (not provided with the kit).
- 5:** After having made a seat of the correct size in the wall and positioned it according to the diagram, place a connector block(L) inside with the relative SHUKO model electrical plug.
- 6:** Fit the cover and secure it with the four screws provided (E).

