

Arturo

Installation Guide



Main Material of Manufacture - Stainless Steel

Attention The connection of this radiator to a central heating system should be carried out by a suitably competent person who is familiar with current regulations.



Read this guide before starting installation

Handling Advice

Please refer to the manual handling guidelines that are supplied with this product. This gives important information about the safe lifting of these radiators to minimise risk and damage.

Water Treatment

These products are for use on all heating systems.

On completion of the installation the entire system **MUST** be thoroughly cleaned and flushed to remove debris/flux residues etc. If a chemical cleanser is used, it must be thoroughly flushed from the system. Following this, the system **MUST** be dosed with a good quality water treatment to prevent corrosion. System design, flushing and dosing must be in accordance with BS 5449: 1990, BS EN 12828: 2003 and BS 7593: 1992

IMPORTANT: Failure to observe these requirements will render the guarantee on the product void.

Corrosion inhibitor must be used in accordance with the manufacturer's instructions and recommendations and should take into account the particular metals within the system.

Cleaning & Aftercare

The external surface of the radiator should be cleaned with mild detergent. No solvents or abrasives should be used.

Operating Pressure

Maximum 6 bar

 
Further Information

These radiators have been designed, manufactured and tested to ensure a long-lasting use. Should you require any further information, help or advice, or have any difficulties with these products or their installation and use, please contact our office on:


Tel: **01268 546700** Fax: **01268 888250**

Web: **www.mhsradiators.com**

write to: 3 Juniper West, Fenton Way, Southfields Business Park, Basildon, Essex SS15 6SJ

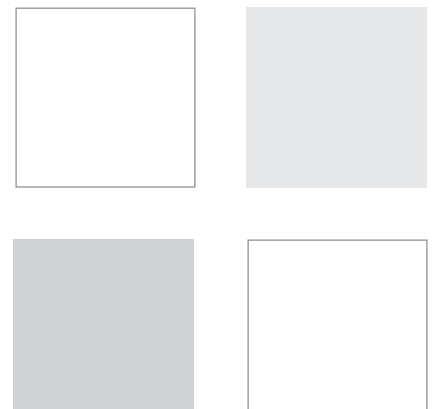

Installation Instructions

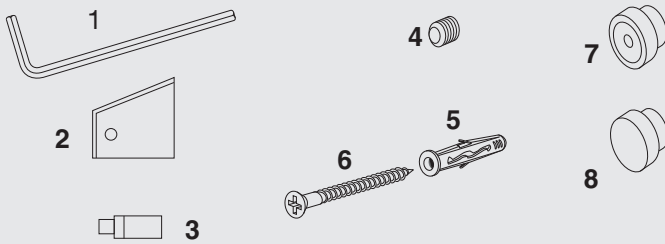 

Installation Accessories:

- 1 - 1 x Allen Key
- 2 - 4 x Bracket
- 3 - 4 x Extension inserts
- 4 - 8 x Grub Screws
- 5 - 4 x Wall Plugs
- 6 - 4 x Screws 6mm
- 7 - 1 x Air Vent
- 8 - 1 x Blanking Plug

Preparation:

 
 
Before fitting the Arturo radiator, please ensure all components shown in this guide are complete.

Mounting the Radiator:

- 1: Screw the 4 X inserts (3) onto the nuts welded on the back of the radiator. Slide 4 X brackets (2) onto inserts and secure with grub screws (4).
- 2: Site the unit against the wall. It should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor.

Transfer the bracket drill position measurements to the wall.

- 3: Remove the unit, drill and insert wall plugs (or other suitable fixings)
- 4: Insert screw through bracket sleeve and fasten brackets. Position rad then tighten the grub screws.
- 5: Horizontal installation: See important note below.

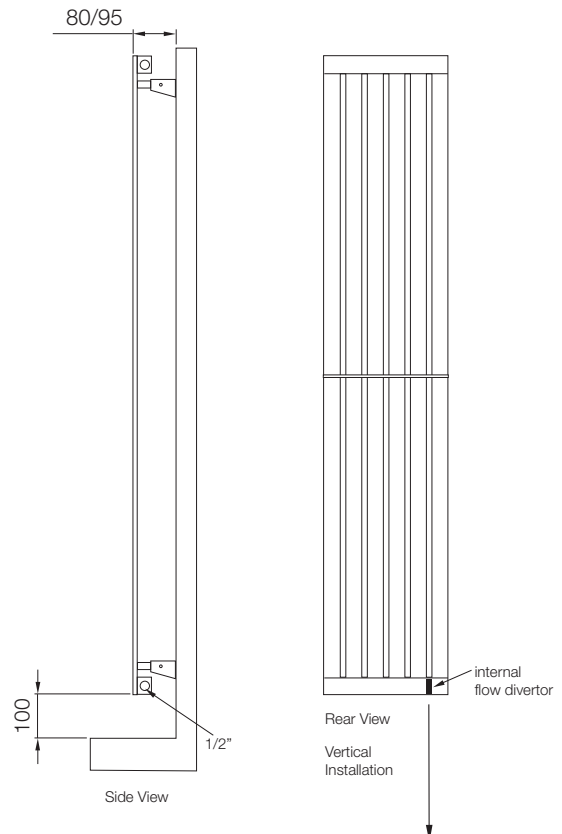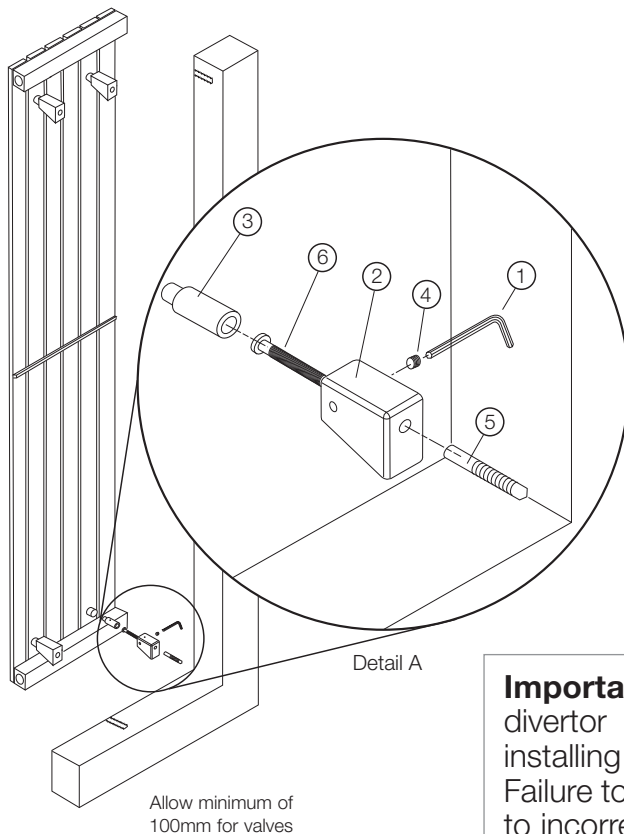

Important Note: The internal flow diverter must be pressed flat when installing these radiators **horizontally**. Failure to follow this instruction will lead to incorrect operation.

